 
 
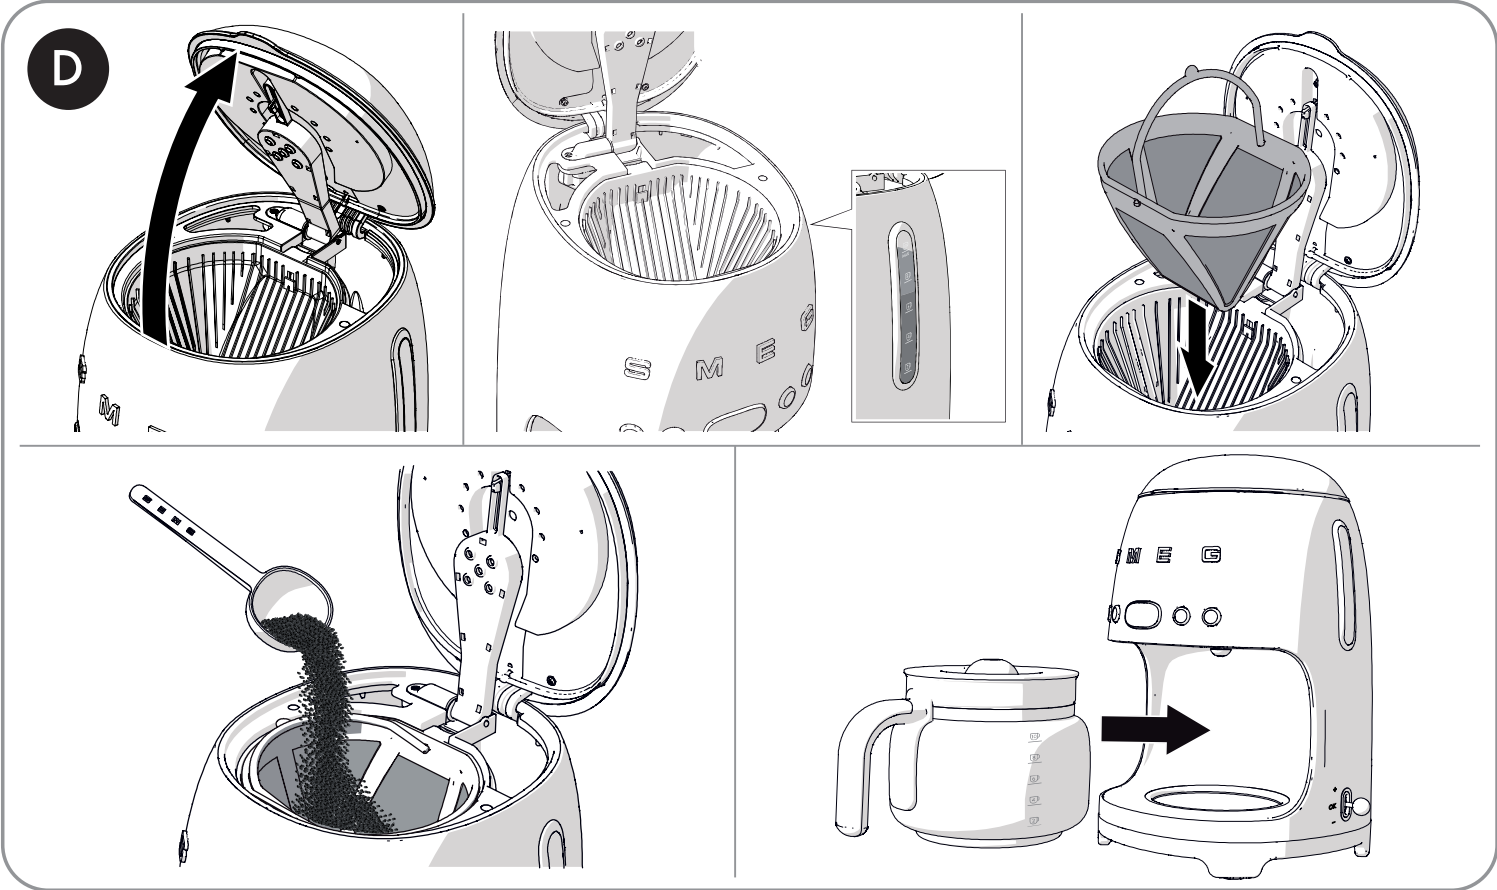 
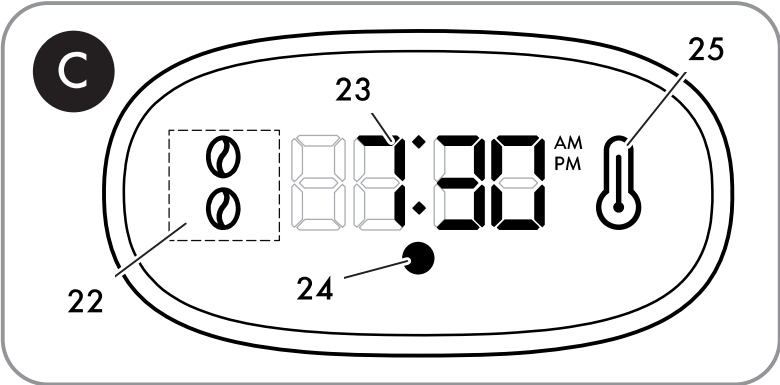 


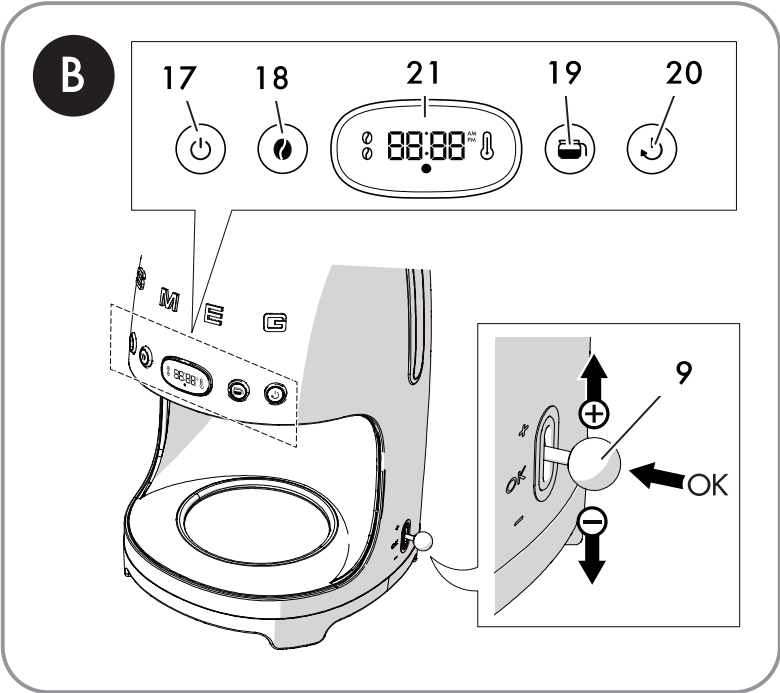

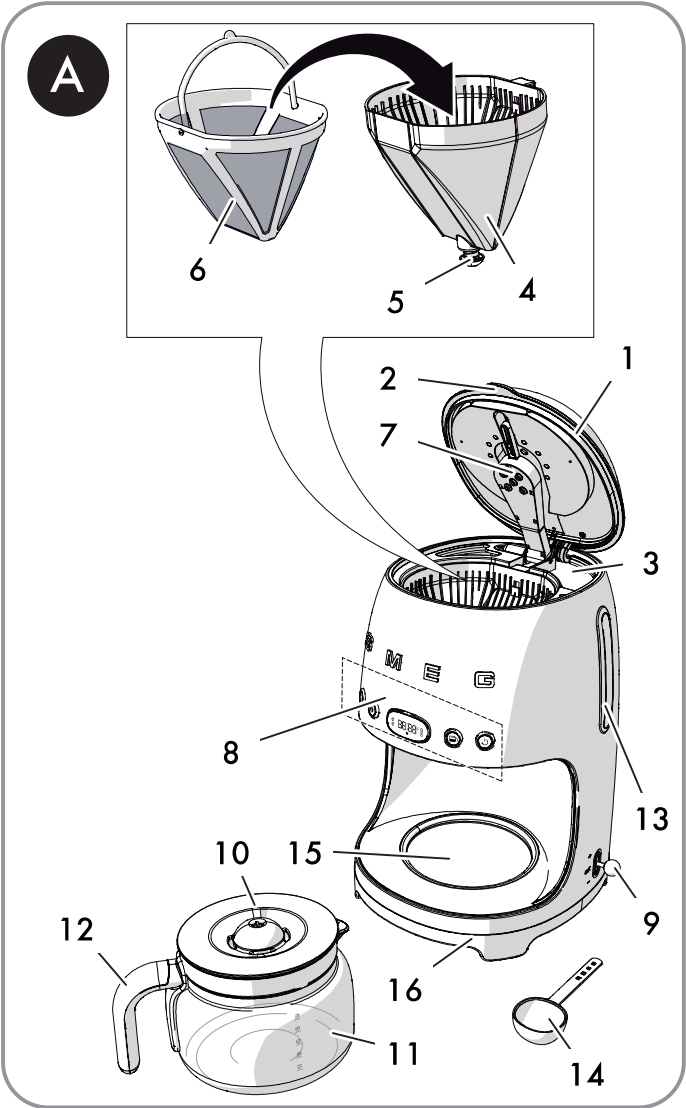

Description

2 Appliance description (Fig. A)

- 1) Lid
- 2) Tab
- 3) Water tank (1.4 litres)
- 4) Filter holder
- 5) Anti-drip valve
- 6) Permanent filter
- 7) Boiler outlet
- 8) Control panel and display
- 9) Time / timer setting lever
- 10) Jug lid
- 11) Jug (10 cups)
- 12) Jug handle
- 13) Water tank level indicator (max. 1.4 litres)
- 14) Scoop
- 15) Keep Warm plate
- 16) Base and non-slip feet

2.1 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance.

Do not remove the identification plate for any reason.

2.2 Before first use

- Carefully unpack the appliance, remove all packaging materials and remove the label from the display.
- Thoroughly wash and dry the components of the drip coffee machine (see section "4 Cleaning and maintenance").



Before use, make sure that all components are intact and that there are no cracks

2.3 Description of controls (Fig. B)

ON/OFF button (17)

Dispense button. When the button is pressed, the machine starts brewing coffee according to the pre-set functions. You can stop brewing coffee at any time by pressing the button again.

Aroma button (18)

Pressing the button allows you to select between Delicate and Intense Aroma. The intensity selection will be shown on the display: one bean for Delicate Aroma, or two beans for Intense Aroma.



The aroma setting is maintained for subsequent brewing cycles.

4-Cup button (19)

This button allows you to brew a small amount of coffee, corresponding to approximately 4 cups.

To activate the 4-cup function, see section "4 cups function".

Autostart button (20)

This button allows the appliance to be programmed to switch on automatically to prepare drip coffee at a time selected by the user.

To set, activate and use this function, see the section "Autostart function".

Time / timer setting lever (9)

The lever at the side allows you to select and set the machine settings such as:

- setting the time



- selecting and setting the water hardness
- setting the sounds

For more details on the settings, see the section "Machine settings".

2.4 Display Description (Fig. C)

The display (21) allows the user to view the functions set on the machine:

	Icon	Meaning
22		Delicate Aroma
		Intense Aroma
23		Time
24		Red: Descaling recommended
25		Keep Warm



The **KEEP WARM** mode is activated automatically after the coffee has been brewed and keeps the warming plate on for 40 minutes. In this way, the coffee will remain hot for 40 minutes after it has been brewed.

3 Use (Fig. D)

- Make sure that the plug is properly inserted into the power socket.



When connecting the machine to the power socket, you are prompted to set the time (see section "Machine settings")

- Lift the lid (1) by pulling the tab upwards (2).
- Fill the tank (3) with fresh clean water, taking care not to exceed the maximum level shown on the level indicator (1.4 litres) (13). Exceeding the maximum level may cause water to leak and irreparable damage to the appliance.



To make it easier to fill the tank, make sure that the lid is completely open.



Caution

- Do not use the drip coffee machine if there is no water in the tank.
- Only put fresh clean water in the tank.
- Do not use liquids other than water.



The components intended to come into contact with food are made of materials that comply with the provisions of current legislation.



Use

- Hold the lid of the water tank open and insert the permanent filter (6) into the filter holder (4).
- Fill with the amount of coffee required, according to the number of cups to be prepared, using the scoop (14) provided.



- The permanent filter allows you to prepare filter coffee without using paper filters. However, according to your own preference, a paper filter #4 can be used instead.
- Place the paper filter in the filter holder and add the required amount of coffee.
- One level scoop of ground coffee is approximately equivalent to one cup of filter coffee. However, the amount of ground coffee to be used may vary according to personal taste.
- Use good quality medium ground coffee.

- Close the lid by lowering the tab (2).
- Place the jug (11) with the lid (10) on the keep warm plate (15). Make sure that the lid (10) fits perfectly into the anti-drip valve (5).
- Press button (17)  to start brewing coffee. The LED on button (17)  lights up and flashes quickly for the entire time the coffee is being brewed.



It is normal for steam to be produced while the coffee is being brewed.



Caution

Do not open the lid of the water tank while the coffee is being brewed.

- You can stop brewing coffee at any time by pressing button (17) .



Caution

- Do not open the lid of the drip coffee machine as soon as the brewing cycle has finished. Wait for at least 5 minutes after the coffee has been brewed before opening the lid.
- After 5 minutes, it is possible to remove and clean the filter and fill the tank again to brew more coffee.



If button (17)  is not pressed, coffee will continue to be brewed according to the automatic settings and fill the jug completely (10 cups) or until there is no water remaining in the tank. The other buttons, even if pressed, have no effect and do not stop coffee from being brewed.



Caution

- The filter holder and the permanent filter may be hot after the coffee has been brewed. Be careful when removing them.
- The base of the jug may be very hot after the coffee has been brewed. Take care when removing it and make sure that you do not place the jug on a heat-sensitive surface.
- The Keep Warm plate remains warm after the coffee has been brewed: be careful not to touch it when removing the jug.



The **KEEP WARM**  mode cannot be activated if brewing is stopped manually or if the **4 CUPS** mode is active.

NE

KEEP WARM mode

Once the coffee has been brewed, the **KEEP WARM**  mode is activated automatically and keeps the warming plate on for 40 minutes. In this way, the coffee will remain hot for 40 minutes after it has been brewed.

In the **KEEP WARM**  mode, the LED of button (17)  flashes slowly and the **KEEP WARM**  icon lights up on the display.

At the end of the **KEEP WARM**  mode, button (17)  turns off automatically.

The **KEEP WARM**  mode can be stopped manually at any time by pressing button (17) : the LED of button (17)  and the **KEEP WARM**  icon turn off.

4 cups function

Brews a small amount of coffee, corresponding to approximately 4 cups:

- Press button (19)  to activate it, the LED turns on.
- Press button (19)  again to deactivate it.

Autostart function

The automatic start time has to be set before the automatic start function can be programmed.

Setting the Autostart time

- Make sure that the time displayed is correct. Otherwise, set the correct time as described in section "Machine settings".
- Press and hold the button for 3 seconds to set the time for the automatic start mode: the LED of the button and the time display (HH:MM) start to flash.
- Move the lever up (+) or down (-) to set the time.
- Confirm the time by moving the lever to the central position and press (OK): the set time will be saved automatically and will be used until it is modified.



Use

Autostart function activation

- Press button (20) : the LED of button (20)  will light up and the hours and minutes of the set start time for brewing the coffee will flash for a few seconds on the display. Then the current time will be displayed.



You can also select the intensity (Aroma button) and the 4-cup function when using the Autostart function. Press the relative buttons to memorize the functions.

- The appliance remains in **AUTOSTART** mode until the pre-set time is reached. Coffee will be brewed automatically.
- Press button (20)  at any time to exit from this mode.

Machine settings

The appliance allows you to personalise some settings:

- clock settings
- time format
- water hardness
- activation / deactivation of the acoustic signals

Setting the clock

The time has to be set when you use the appliance for the first time:

- Plug the appliance into an electrical outlet.
- The symbols on the display flash.
- Set the time by moving the lever up (+) to increase the value or down (-) to decrease it. Move the lever to the central position and press (OK) to confirm.

- Set by following the same procedure.
- After confirming the minutes setting, the appliance activates the **CLOCK** mode.



When the appliance is switched on for the first time, the default time will be shown in the 12 h time format, indicating **AM/PM**. To change the time format, see the "Time format settings menu" section.

Time format settings menu

The time format can be set to display the time in a 12 h or an **AM/PM** format.

- Access the settings menu by pressing and holding buttons (18)  and (19)  at the same time for 3 seconds. Select **SE01** by moving the lever and pressing it to the "OK" position.
- Move the lever to select the required format (12 h or 24 h)
- Move the lever to the central position and press (OK) to confirm the setting. The format will flash for 2 seconds: the setting is saved.



The time format only needs to be set once and the setting is saved.



Modifying the time

- Make sure that the required format (12 h or 24 h) has been set as indicated in the previous section.
- Keep the lever (9) pressed in the central position for 3 seconds: the display starts to flash.
- Modify the hours and minutes as indicated in the "Setting the clock" section.

Water hardness settings menu

The water hardness can be set by selecting one of the 3 settings: **HARD**, **MEDIUM** and **SOFT**.

- Access the settings menu by pressing and holding buttons (18)  and (19)  at the same time for 3 seconds. Select **SE02** by moving the lever: the display shows **HA02** by default (medium hardness).
- Move the lever up (+) or down (-) to set the required level: **HA01** (soft), **HA02** (medium) and **HA03** (hard).
- Move the lever to the central position and press (**OK**) to confirm the setting.

The selection flashes for 2 seconds: the setting is saved.

Sounds settings menu

The sounds can be enabled/disabled as follows:

- Access the settings menu by pressing and holding buttons (18)  and (19)  at the same time for 3 seconds. Select **SE03** by moving the lever (9).
- Move the lever up or down until **OFF** appears on the display to disable the sounds or **ON** to enable them.
- Move the lever to the central position and press (**OK**) to confirm the setting. The selection flashes for 2 seconds: the setting is saved.