


Flexibility to connect Single Split System or Multi Split System Air Conditioner to suit your needs.
For complete product features, please refer to catalogue.

Quick Guide

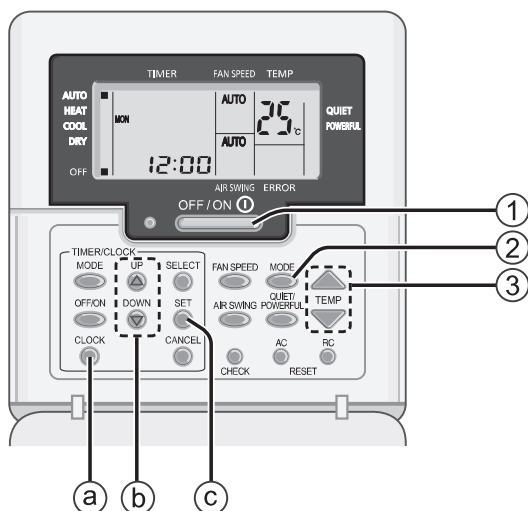

Remote Control Preparation

- (a) Press 
- (b) Press to set day
- (c) Confirm

Repeat steps "b" and "c" to set the current time.



Thank you for purchasing
Panasonic Air Conditioner.

Table of contents


Safety precautions.....	4-15
How to use.....	16-17
To learn more.....	18
Cleaning instructions.....	19
Troubleshooting	20-22
Information.....	23

English

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. They are subject to change without notice for future improvement.

Basic operation

- ① Press **OFF / ON**  to start/stop the operation.
- ② Press **MODE**  to select the desired mode.


- ③ Select the desired temperature.


UP 

DOWN 

Selection range: 16 °C ~ 30 °C / 60 °F ~ 86 °F.

How to use

Remote control display

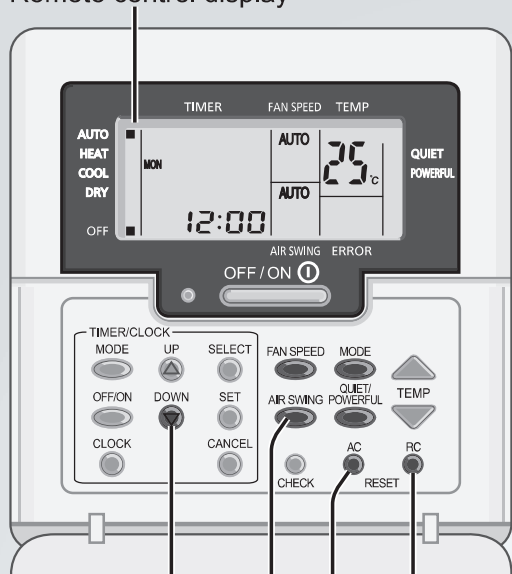

Press and hold
for approximately
10 seconds to show
temperature setting
in °C or °E.

Not applicable

Press to restore the remote control to previous setting.

Not used in normal operations.



To select fan speed

(Remote control display)



- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.



To select operation mode

AUTO - For your convenience


HEAT - To enjoy warm air

COOL- To enjoy cool air

DRY - To dehumidify the environment



To switch between quiet & powerful



QUIET: To enjoy quiet operation

- This operation reduces airflow noise.


POWERFUL: To reach temperature quickly

- This operation stops automatically after 20 minutes.
- To eliminate the POWERFUL indicator after 20 minutes operation, press  button again.

Can be activated in all modes and can be cancelled by pressing the respective button again.

Daily timer setting

To turn ON or OFF the unit at a preset time.

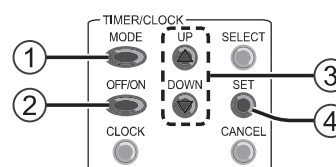

MODE

- ① **Press **TIMER**  to enter timer mode**
- Press once to change the display from clock to timer or vice-versa.
 - Press for 4 seconds to change the display from daily timer to weekly timer or vice-versa.


- ② **Select ON or OFF timer** Example:
OFF at 22:00



- ### ③ Set the time



- #### ④ Confirm

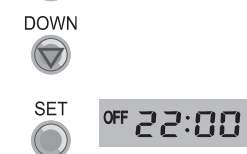


- To cancel, press  .

- When ON timer is set, the unit may start early before the actual set time in order to achieve the desired temperature on time.
- Timer operation is based on the clock set in the remote control and repeats daily once set.
- The timer closest to the current time will be activated first.
- If timer is cancelled manually or due to power failure, you can restore the previous setting by pressing .


To set the timer

Weekly timer setting

Promotes energy saving by allowing you to set up to 6 programmes in any given day.

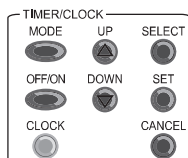

Lights up if Timer operation is selected

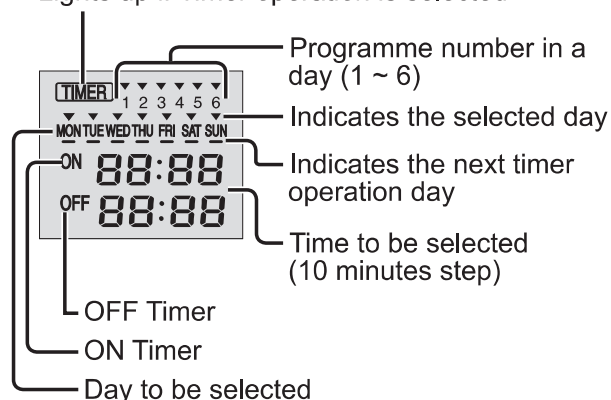

1. Press **TIMER** for 4 seconds to change display to weekly timer.



2. Press **TIMER** or to select your desired day.
3. Press to confirm your selection.
4. "1" will be blinking, press to set programme 1.
5. Press **TIMER** to select ON or OFF timer.
6. Press **TIMER** or to select your desired time.
If you want to set the timer together with your desired temperature, press to select the temperature.

7. Press to confirm programme 1. The selected day will be highlighted with .
 - After 2 seconds, the display will move to the next programme. Repeat steps 4 to 7 to set programmes 2 to 6.
 - During timer setup, if no button is pressed within 30 seconds, or if the button is pressed, the setting at that moment is confirmed and timer setup is ended.

To check current timer programme

1. Press **TIMER** to enter timer mode and press to enter day setting.
2. Press **TIMER** or until your desired day is shown, press to confirm your selection.
3. Press **TIMER** or to check the set programmes.

To modify current timer programme or add new timer programme

1. Press **TIMER** to enter timer mode and press to enter day setting.
2. Press **TIMER** or until your desired day is shown.
3. Perform steps 4 to 7 of "Weekly timer setting" to modify existing timer programme, or add any timer programme.

To cancel current timer programme

1. Press to enter day.
2. Press **TIMER** or until your desired day is shown, press to enter programme setting.
3. Press **TIMER** or until your desired programme is shown. Press to cancel the programme and will disappear.

To disable/enable Weekly Timer

- To disable weekly timer setting, press **TIMER** , then press .
- To enable previous weekly timer setting, press **TIMER** , then press .

Note

- Daily timer and weekly timer could not be set at the same time.
- Same timer programme cannot be set in the same day.